Manufacturer Name	Product Family Name	Fuel Type	AFUE	Model Series
(Trade Name)	Trouble Tuning Tunie	(eg. Gas,	Rating	Nodel Series
(Truce runne)		Oil, etc.)	- Cutting	
Adams Manufacturing	Condensing Oil Furnace		95	AHEO Series Oil Furnaces
Adams Manufacturing	Condensing Oil Furnace		95	ASHEO Series Oil Furnaces
Air-Ease	Ultra SX 90		90	All models beginning with GUK or GCK
Air-Ease	Ultra SX 93		93	All models beginning with GU 93
Air-Ease	Ultra SX 95		95	All models beginning with GU 95
Air-Ease Air-Ease	Ultra V Tech 90 Ultra V Tech 91		90 91	All models beginning with G1D90 All models beginning with G1D91
Air-Ease Air-Ease	Ultra V Advantage 93		93	All models beginning with G1D91 All models beginning with G1D93
Air-Ease	Ultra V Enhanced 95		94 - 94.5	All models beginning with G1D95
AirQuest	DV 90		90	All models beginning with NTGS
AirQuest	DV 90		91	All models beginning with NUG9
AirQuest	DC 90 (upflow/horiz)		92	All models beginning with NTGM
AirQuest	94V		94	All models beginning with NTVM
AirQuest	NTPM		92	All models beginning with NTPM
AirQuest	NCPM		92	All models beginning with NCPM
AirQuest AirQuest	DC 90 (downflow/horiz) NTGS		92 91	All models beginning with NCGM All models beginning with NTGS
AirQuest	PS 90 Series		90	All models beginning with N9MP1
AirQuest	PS 90-DV Series		90	All models beginning with N9MP2
AirQuest	DLX 90 Series		92	All models beginning with H9MPD
AirQuest	IIS 90 Series		92	All models beginning with H9MPT
Arcoaire	VS 90 Series		92	All models beginning with H9MPV
Arcoaire	GNM		91	All models beginning with GNM
Arcoaire	94V		94	All models beginning with VNK
Arcoaire	TNK 92		92	All models beginning with TNK
Arcoaire	TCK 90		92	All models beginning with TCK
Arcoaire Arcoaire	GNK (upflow/horiz) GCK (downflow/horiz)		92 90	All models beginning with GNK All models beginning with GCK
Arcoaire	GNP		91	All models beginning with GNP
Arcoaire	DC90 (upflow/horiz)		92	All models beginning with NTGM
Arcoaire	DC90 (downflow/horiz)		90	All models beginning with NCGM
Arcoaire	NTGS		91	All models beginning with NTGS
Arcoaire	DV90		91	All models beginning with NTG9
Arcoaire	(None)		90	All models beginning with GUM
Arcoaire	Enviroplus 90		90.1-92	All models beginning with GUK, GDK, GCK
Arcoaire	PS 90 Series PS 90-DV Series		90	All models beginning with N9MP1 All models beginning with N9MP2
Arcoaire Arcoaire	DLX 90 Series		92	All models beginning with H9MPD
Arcoaire	IIS 90 Series		92	All models beginning with H9MPT
Arcoaire	VS 90 Series		92	All models beginning with H9MPV
Amana	Gas Furnace	Gas	95	GCVA
Amana	Gas Furnace	Gas	95	GUVA
Amana	Gas Furnace	Gas	92	GUSA
Amana	Gas Furnace	Gas	92	GCCA
Amana	Gas Furnace	Gas	92	GUCA
American Standard Armstrong Air	Freedom 90 Ultra SX 90		91-93 90	Models with AUY ,ADY, AUC, ADC, AUX ,ADX All models beginning with GUK or GCK
Armstrong Air	Ultra SX 93		93	All models beginning with GU 93
Armstrong Air	Ultra SX 95		95	All models beginning with GU 95
Armstrong Air	Ultra V Tech 90		90	All models beginning with G1D90
Armstrong Air	Ultra V Tech 91		91	All models beginning with G1D91
Armstrong Air	Ultra V Advantage 93		93	All models beginning with G1D93
Armstrong Air	Ultra V Enhanced 95		94 - 94.5	All models beginning with G1D95
Carrier Corporation (Bryant)	Condensing Furnace		91	All models beginning with 340MAV
Carrier Corporation (Bryant)	Condensing Furnace		90	All models beginning with 345MAV
Carrier Corporation (Bryant)	Condensing Furnace		90 92	All models beginning with 351DAS
Carrier Corporation (Bryant) Carrier Corporation (Bryant)	Plus 90 Plus 90i	1	94-96	All models beginning with 350MAV All models beginning with 355MAV
Carrier Corporation (Bryant) Carrier Corporation (Bryant)	Plus 90t		93	All models beginning with 353MAV All models beginning with 352MAV
Carrier Corporation (Bryant, Day&Night, Payne)	Condensing Furnace		91	All models beginning with 340MAV
Carrier Corporation (Bryant, Day&Night, Payne)	Condensing Furnace		90	All models beginning with 345MAV
Carrier Corporation (Bryant, Day&Night, Payne)	Plus 90		92	All models beginning with 350MAV
Carrier Corporation (Bryant, Day&Night, Payne)	Plus 90i		94-96	All models beginning with 355MAV
Carrier Corporation (Carrier)	Condensing Furnace		91	All models beginning with 58MCA
Carrier Corporation (Carrier)	Condensing Furnace		91	All models beginning with 58MCA
Carrier Corporation (Carrier)	Condensing Furnace		90	All models beginning with 58MSA
Carrier Corporation (Carrier)	Condensing Furnace		90	All models beginning with 58MSA
Carrier Corporation (Carrier) Carrier Corporation (Carrier)	Infinity Infinity		94-96.6 94-96.6	All models beginning with 58MVP All models beginning with 58MVP
Carrier Corporation (Carrier) Carrier Corporation (Carrier)	Infinity WeatherMaker		94-96.6	All models beginning with 58MVP All models beginning with 58MXA
Carrier Corporation (Carrier)	VY Cadiciivianci	1	14	An moucis organismig with JoivIAA

Carrier Companion (Carrier)	Manufacturer Name	Duodust Family Name	Fuel Tyme	APLIE	Model Series
Carrier Carponition (Carrier)		Product Family Name			Model Series
Carrier Cepteration (Carrier) Weathermaker 92	(Trade Name)			Rating	
Carrier Composition Cartriery Weathershikes 9300TS 91			Oil, etc.)	0.0	
Conference Pare Condenting Farance Pare P					
Cambridge Camb					
Commission True Blue 90					
Coleman Condenning Furnace 94 69V	Consolidated Industries				
Coleman Condensing Furnace 91 69D	Coleman	Condensing Furnace			
Coleman Condensing Furnace 91 - 94 69T	Coleman	Ü			
Codeman Condeman Condeman Condeman Condeman Codeman		Ü			
October Octo					
Ocheman-Evocon		<u> </u>			
Coleman-Evon					
Coleman Cole					
Conformaker	Coleman-Evcon				
Conformaker	Comfortmaker	(None)		90	All models beginning with GUM
Conformanker	Comfortmaker			90.1-92	
Confortunater	Comfortmaker				
Comfortunker					
Conformaker					
Comformaker					
Confortmaker					<u> </u>
Sect		,		-	
PS 9-D V Series	Comfortmaker				
Confortmaker	Comfortmaker	PS 90-DV Series		90	
Conformaker	Comfortmaker	DLX 90 Series		92	All models beginning with C9MPD
Concord	Comfortmaker				
Domback Furnace Division	Comfortmaker				
Domback Furnace Division					
Ducane Company					All models beginning with HEO
Ducane Company			+		
Ducane Company Classic 94 Gas 93-94 All models beginning with FPAA ECR International (Olsen, Airco) Utramax III Gas 95 GTH					
ECR International (Olesia, Airco)					
ECR International (Oneida Royal) Condensing Furnace Gas 95 OGTH			Gas		
Aire-Flo	ECR International (Oneida Royal)	Condensing Furnace	Gas	95	OGTH
AF90MPA050C3 AF90MPA075C3 AF90MPA075C3 AF90MPA075C3 AF90MPA075C3 AF90MPA075C3 AF90MPA075C3 AF90MPA10C4 AF90MPA10C4 AF90MPA125C4 AF90MP	EVCON			92-94	All models beginning with DGU or DGD
AF90MPA075U3 AF90MPA075C3 AF90MPA075C3 AF90MPA075C3 AF90MPA100C4 AF90MPA100C4 AF90MPA100C4 AF90MPA125U4 AF90MPA125U4 AF90MPA125U4 AF90MPA125U4 AF90MPA125U4 AF90MPA125C4 AF90	Excel Comfort Systems (Aire-Flo)	Aire-Flo		92	
AF90MPA100U4 AF90MPA100U4 AF90MPA100U4 AF90MPA100U4 AF90MPA125U4 AF90					
AF90MPA100U4 AF90MPA10UC4 AF90MPA125U4 AF90MPA125U4 AF90MPA125U4 AF90MPA125U4 AF90MPA125C4 AF90					
AF90MPA125U4 AF90					AF90MPA075C3
AF90MPA125U4 AF90					AF90MPA100U4
AF90MPA125U4 AF90MPA125C4					
Excel Comfort Systems (Aire-Flo					
Praser-Johnston					AF90MPA125C4
Gas Furnace Gas 92 GMNT	Excel Comfort Systems (Aire-Flo	Aire-Flo		90	
Gas Furnace Gas 92 GMNTE	Fraser-Johnston				
Heat Controller (Comfort-Aire) (Century) Conquest 90 94 FLUA45-E3 Heat Controller (Comfort-Aire) (Century) Conquest 90 93.3 GLUA60-E3 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E3 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E4 Heat Controller (Comfort-Aire) (Century) Conquest 90 93.5 GLUA90-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92 GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9 Heil DC90 90.1-92 All models beginning with NUGM, NDGM, NCGM Heil QuietComfort* II (upflow/downflow) 92 All models beginning with NTVM Heil QuietComfort* II (downflow/horiz) 92 All models beginning with NTGM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (upflow/horiz) 90 All models beginning with NTGM Heil DC90 (upflow/horiz) 90 All models beginning with NTGM Heil DC90 (upflow/horiz) 90 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NTGM Heil DLX 90 Series 90 All models beginning with H9MPD Heil DLX 90 Series 92 All models beginning with H9MPD	Goodman Manufacturing				
Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E3 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E4 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E4 Heat Controller (Comfort-Aire) (Century) Conquest 90 93.5 GLUA90-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92 GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9 Heil 94V 94 All models beginning with NTVM Heil 94V 94 All models beginning with NTPM Heil QuietComfort™ II (µflow/downflow) PS 90 All models beginning with NTPM Heil DC90 (µghflow/horiz) PO90 All models beginning with NTPM Heil DC90 (µghflow/horiz) 92 All models beginning with NTPM Heil DC90 (µghflow/horiz) 93.3 GLUA60-E3 GLUA75-E3 GLUA75-E4 GLUA90-E5 GLUA105-E5 HEAT (Controller (Comfort-Aire) (Century) PS 90-DV Series 90 All models beginning with NTPM Heil DC90 (µghflow/horiz) 91 All models beginning with NTPM PS 90-DV Series 90 All models beginning with NTGM PS 90-DV Series 90 All models beginning with NPMP Heil DLX 90 Series 91 All models beginning with NPMP Heil DLX 90 Series 92 All models beginning with NPMP	Goodman Manufacturing		Gas		
Heat Controller (Comfort-Aire) (Century) Conquest 90 92.8 GLUA75-E3 Heat Controller (Comfort-Aire) (Century) Conquest 90 93.5 GLUA90-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 93.5 GLUA90-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92. GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90. All models beginning with NUG9 Heil 94V Heil 94V Heil QuietComfort-™ II (upflow/downflow) Heil QuietComfort-™ II (downflow/horiz) Heil DC90 (upflow/horiz) 92 All models beginning with NTPM Heil DC90 (upflow/horiz) 93 All models beginning with NTPM Heil DC90 (upflow/horiz) 94 All models beginning with NTPM Heil DC90 (downflow/horiz) 95 All models beginning with NTPM Heil DC90 (downflow/horiz) 96 All models beginning with NTPM Heil DC90 (downflow/horiz) 97 All models beginning with NTPM Heil DC90 (downflow/horiz) 98 All models beginning with NTPM Heil DC90 (downflow/horiz) 99 All models beginning with NTGM DC90 (downflow/horiz) 90 All models beginning with NTGM DC90 All models beginning with NTGM DC90 All models beginning with NTGM Heil DLX 90 Series 90 All models beginning with NPMP2 Heil DLX 90 Series 91 All models beginning with NPMP1 Heil DLX 90 Series 92 All models beginning with H9MPD	Heat Controller (Comfort-Aire) (Century)				
Heat Controller (Comfort-Aire) (Century) Conquest 90 Conquest 90 Conquest 90 GLUA75-E4 Heat Controller (Comfort-Aire) (Century) Conquest 90 GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92 GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9, NCGM Heil P4V 94 All models beginning with NTPM Heil QuietComfort™ II (upflow/downflow) P2 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) P3 All models beginning with NTPM Heil DC90 (upflow/horiz) P4 All models beginning with NTPM Heil DC90 (upflow/horiz) P5 All models beginning with NTPM Heil DC90 (downflow/horiz) P6 All models beginning with NTPM All models beginning with NCPM Heil DC90 (downflow/horiz) P5 All models beginning with NGM Heil DC90 (downflow/horiz) P6 All models beginning with NGM P8 P8 P9-DV Series P9 All models beginning with N9MP2 Heil DLX 90 Series P2 All models beginning with H9MPD Heil DLX 90 Series P3 All models beginning with H9MPT					
Heat Controller (Comfort-Aire) (Century) Conquest 90 92 GLUA105-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heit Controller (Comfort-Aire) (Century) By 2.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9 Heil DC90 Heil D4V 91 All models beginning with NUGM, NDGM, NCGM Heil P4V Heil QuietComfort™ II (upflow/downflow) P5 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) Heil DC90 (upflow/horiz) P6 All models beginning with NTPM Heil DC90 (upflow/horiz) P7 All models beginning with NTPM Heil DC90 (downflow/horiz) P8 90-DV Series 90 All models beginning with NGM H9MPT Heil DLX 90 Series 92 All models beginning with N9MP2 Heil DLX 90 Series 93 All models beginning with N9MPT		1			
Heat Controller (Comfort-Aire) (Century) Conquest 90 P4.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 P5.7 ELDH45-E3 Heil DV90 P6.1 All models beginning with NTG9 Heil DV90 P6.1 All models beginning with NUG9 Heil P7.2 All models beginning with NUGM, NDGM, NCGM Heil P8.4 All models beginning with NTVM P9.4 All models beginning with NTVM P9.4 All models beginning with NTVM P9.5 All models beginning with NTVM Heil P8.9 All models beginning with NTPM P9.4 All models beginning with NTVM P9.5 All models beginning with NTPM P9.5 All models beginning with NTPM P9.5 All models beginning with NTPM P1.5 All models beginning with NTPM	/\ //				
Heat Controller (Comfort-Aire) (Century) Conquest 90 94.2 FLUA120-E5 Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Hell DV90 91 All models beginning with NTG9 Heil DC90 90.1-92 All models beginning with NUGM, NDGM, NCGM Heil 94V 94 All models beginning with NTVM Heil QuietComfort™ II (upflow/downflow) PuietComfort™ II (upflow/downflow) Heil QuietComfort™ II (downflow/horiz) PuietComfort™ II (upflow/horiz) Puie					
Heat Controller (Comfort-Aire) (Century) Conquest 90 92.7 ELDH45-E3 Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9 Heil DC90 90.1-92 All models beginning with NTGM, NDGM, NCGM Heil 94V 94 All models beginning with NTVM Heil QuietComfort™ II (upflow/downflow) 92 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) 92 All models beginning with NCPM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT	Heat Controller (Comfort-Aire) (Century)				
Heil DV90 91 All models beginning with NTG9 Heil DV90 90 All models beginning with NUG9 Heil DC90 90.1-92 All models beginning with NUGM, NDGM, NCGM Heil 94V 94 All models beginning with NTVM Heil QuietComfort™ II (upflow/downflow) 92 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) 92 All models beginning with NCPM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT	Heat Controller (Comfort-Aire) (Century)				
Heil DC90 90.1-92 All models beginning with NUGM, NDGM, NCGM Heil 94V 94 All models beginning with NTVM Heil QuietComfort™ II (upflow/downflow) 92 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) 92 All models beginning with NCPM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil DLX 90 Series 92 All models beginning with H9MPD	Heil	DV90			
Heil 94V 94 All models beginning with NTVM Heil QuietComfort™ II (upflow/downflow) 92 All models beginning with NTPM Heil QuietComfort™ II (downflow/horiz) 92 All models beginning with NCPM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPD	Heil				5 5
Heil QuietComfort™ II (upflow/downflow) Heil QuietComfort™ II (downflow/horiz) Heil QuietComfort™ II (downflow/horiz) Heil DC90 (upflow/horiz) Heil DC90 (downflow/horiz) Heil DC90 (downflow/horiz) PS 90-DV Series DLX 90 Series DLX 90 Series PS 90 All models beginning with N7GM All models beginning with N7GM All models beginning with N9MP2 Heil DLX 90 Series PS 92 All models beginning with H9MPD Heil IIS 90 Series PS 92 All models beginning with H9MPD	Heil				
Heil QuietComfort ¹⁰ II (downflow/horiz) 92 All models beginning with NCPM Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPD					<u> </u>
Heil DC90 (upflow/horiz) 92 All models beginning with NTGM Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT					
Heil DC90 (downflow/horiz) 90 All models beginning with NCGM Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT					
Heil PS 90-DV Series 90 All models beginning with N9MP2 Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT					
Heil DLX 90 Series 92 All models beginning with H9MPD Heil IIS 90 Series 92 All models beginning with H9MPT			+		
Heil IIS 90 Series 92 All models beginning with H9MPT	Heil				
	Heil				
	Heil				

Manufacturer Name	Product Family Name	Fuel Type	AFUE	Model Series
(Trade Name)	1 Todact Family Name			ivider series
(Trade Name)		(eg. Gas,	Rating	
Tana an Ya da da isa	Elita 00 Car Europa	Oil, etc.)	00.0.02.4	All and delegation in a unity COV or CURDO
Lennox Industries Lennox Industries	Elite 90 Gas Furnace Complete Heat		90.9-92.4	All models beginning with G26 or GHR26 All models beginning with AM30/HM30
Lennox Industries	Dimension Gas Furnace		93.0-94.2	All models beginning with G32
Lennox Industries	Pulse 21 Gas Furnace		93.2-96.2	All models beginning with G21 or GSR21
Lennox Industries	Pulse 21V Gas Furnace		93.4-94.5	All models beginning with G21V or GSR21V
Lennox Industries	Dimension Gas Furnace		90	All models beginning with GHR32
Lennox Industries	G41UF	Gas	90 92	All models beginning with G41 P*LU or P*LD
Luxaire Luxaire	High Performance Peak Performance		92 92 - 94	G9V
Luxaire	High Performance		91 - 94	G9T
Luxaire	Performance Plus		91 - 94	G9D
Luxaire (Basis)	Condensing furnace		91 - 94	FG9
Kenmore	PS 90 Series		90	All models beginning with N9MP1
Kenmore	PS 90-DV Series		90	All models beginning with N9MP2
Kenmore	DLX 90 Series		92 92	All models beginning with C9MPD
Kenmore Kenmore	DLX 90 Series IIS 90 Series		92	All models beginning with T9MPD All models beginning with C9MPT
Kenmore	IIS 90 Series		92	All models beginning with H9MPT
Kenmore	IIS 90 Series		92	All models beginning with T9MPT
Kenmore	VS 90 Series		92	All models beginning with C9MPV
Kenmore	VS 90 Series		92	All models beginning with H9MPV
Kenmore	VS 90 Series		92	All models beginning with T9MPV
NORDYNE Inc. (Gibson)	Condensing Furnace		92	All KG6RC models
NORDYNE Inc. (Gibson)	Condensing Furnace		92	All KG6RL models
NORDYNE Inc. (Grandaire) NORDYNE Inc. (Grandaire)	Condensing Furnace Condensing Furnace		92 92	All KG6RC models All KG6RL models
NORDYNE Inc. (Grandaire)	Condensing Furnace		92	All G6RC models
NORDYNE Inc. (Intertherm)	Condensing Furnace		92	All G6RL models
NORDYNE Inc. (Intertherm)	Condensing Furnace		92	All G6T models
NORDYNE Inc. (Intertherm)	Condensing Furnace		92	All M2R models
NORDYNE Inc. (Intertherm)	Condensing Furnace	Gas	92	All M3RL models
NORDYNE Inc. (Frigidaire)	Condensing Furnace		92	All FG6RC models
NORDYNE Inc. (Frigidaire) NORDYNE Inc. (Frigidaire)	Condensing Furnace Condensing Furnace		92 92	All FG6RL models All FG6T models
NORDYNE Inc. (Kelvinator)	Condensing Furnace		92	All G6RC models
NORDYNE Inc. (Kelvinator)	Condensing Furnace		92	All G6RL models
NORDYNE Inc. (Kelvinator)	Condensing Furnace		92	All G6T models
NORDYNE Inc. (Maytag)	Condensing Furnace		92	All PGF1RC models
NORDYNE Inc. (Maytag)	Condensing Furnace		90	All PGF1RL models
NORDYNE Inc. (Maytag)	Condensing Furnace		92	All PGF1T* models
NORDYNE Inc. (Miller) NORDYNE Inc. (Miller)	Condensing Furnace Condensing Furnace		92 92	All G6RC models All G6RL models
NORDYNE Inc. (Miller)	Condensing Furnace		92	All M2R models
NORDYNE Inc. (Miller)	Condensing Furnace	Gas	92	All M3RL models
NORDYNE Inc. (Philco)	Condensing Furnace		92	All G6RC models
NORDYNE Inc. (Philco)	Condensing Furnace		92	All G6RL models
NORDYNE Inc. (Philco)	Condensing Furnace		92	All G6T models
NORDYNE Inc. (Tappan)	Condensing Furnace		92	All FG6RC models
NORDYNE Inc. (Tappan) NORDYNE Inc. (Tappan)	Condensing Furnace Condensing Furnace		92 92	All FG6RL models All FG6T models
NORDYNE Inc. (Tappan)	Condensing Furnace	1	92	All G6RC models
NORDYNE Inc. (Thermal Zone)	Condensing Furnace	1	90	All G6RL models
NORDYNE Inc. (Thermal Zone)	Condensing Furnace		92	All G6T* models
NORDYNE Inc. (Westinghouse)	Condensing Furnace	1	92	All FG6RC models
NORDYNE Inc. (Westinghouse)	Condensing Furnace	4	90	All FG6RL models
NORDYNE Inc. (Westinghouse)	Condensing Furnace Royal Air 90 U Series	4	92	All FG6T* models
Oneida Royal	Kuyai Air 90 U Series	 	90	90U050D30AZC, 90U050D36AZC, 90U075D30AZC, 90U075D42AZC, 90U100D42AZC, 90U125D60AZC
Payne	Condensing Furnaces		90-92	PG9M
Rheem Manufacturing (Rheem)	FURN/Classic 90 Plus	İ	92-94	All models beginning with RGRA, RGTA
Rheem Manufacturing (Rheem)	FURN/Classic 90		92	All models beginning with RGRJ, RGTJ
Rheem Manufacturing (Rheem)	FURN/Classic 90 Plus w/CCC		94	All models beginning with RGFD, RGGD
Rheem Manufacturing (Ruud)	FURN/Achiever 90 Plus		92-94	All models beginning with UGRA, UGTA
Rheem Manufacturing (Ruud)	FURN/Achiever 90		92	All models beginning with UGRJ, UGTJ
Rheem Manufacturing (Ruud) Rheem Manufacturing (WeatherKing)	FURN/Achiever 90 Plus w/CCC FURN/Select 90 Plus		94 92-94	All models beginning with UGFD, UGGD All models beginning with WGRA, WGTA
Rheem Manufacturing (WeatherKing) Rheem Manufacturing (WeatherKing)	FURN/Select 90 Plus		92-94	All models beginning with WGRA, WGTA All models beginning with WGRJ, WGTJ
Rheem Manufacturing (WeatherKing)	FURN/Select 90 Plus w/CCC		94	All models beginning with WGFD, WGGD
Rheem Manufacturing (WeatherKing LLC)	FURN / 90		90%	All models beginning with 90RJ, 90TJ
Rheem Manufacturing (Corsaire)	FURN/ 90		90	All models beginning with FGRJ, FGTJ

Manufacturer Name	Product Family Name	Fuel Type	AFUE	Model Series
(Trade Name)	· ·	(eg. Gas,	Rating	
(11ude 1 tume)		Oil, etc.)	Tutting	
Rheem Manufacturing (Zephyr)	FURN/ 90	, ,	90	All models beginning with EGRJ, EGTJ
Tempstar	DV 90		90	All models beginning with NTG9
Tempstar	DV 90		90	All models beginning with NUG9
Tempstar	DC 90		90.1-92	All models beginning with NUGM, NDGM, NCGM
Tempstar	94V		94	All models beginning with NTVM
Tempstar	SmartComfort™ II (upflow/downflow)		92	All models beginning with NTPM
Tempstar	SmartComfort™ II (downflow/horiz)		92	All models beginning with NCPM
Tempstar	DC90 (upflow/horiz)		92	All models beginning with NTGM
Tempstar	DC90 (downflow/horiz)		90	All models beginning with NCGM
Tempstar	NTGS		91	All models beginning with NTGS
Tempstar	PS 90 Series		90	All models beginning with N9MP1
Tempstar	PS 90-DV Series		90	All models beginning with N9MP2
Tempstar	DLX 90 Series		92	All models beginning with T9MPD
Tempstar	IIS 90 Series		92	All models beginning with T9MPT
Tempstar	VS 90 Series		92	All models beginning with T9MPV
Texas Furnace, LLC	TFC + 90		90.4	CSA Series
Texas Furnace, LLC	Meridian + 90		90.4	CSA Series
Texas Furnace, LLC	TFC + 90		90.9	VSA Series
Texas Furnace, LLC	Meridian + 90		90.9	VSA Series
Thermal Zone	90% Multi Position Furnace		90	All models beginning GU***M
Thermal Zone	90% Downflow Furnace		90	All models beginning with GD***M
Thermal Zone	93% Upflow Furnace		93	All models beginning with GU***N
Trane	XB90		92	All models beginning with TUC
Trane	XB90		91	All models beginning with TDC
Trane	XR 90		92	All models beginning with TUX
Trane	XR 90		91	All models beginning with TDX
Trane	XL90		92.5-93	All models beginning with TUX-R
Trane	XL90		92.5-93	All models beginning with TDX-R
Trane	XV 90		92.5-93	All models beginning with TUY
Trane	XV 90		92.1-93	All models beginning with TDY
	Upflow, two-stage, condensing	Natural or		
Thermo Products, LLC (Thermo Pride)	furnace	Propane Gas	94.0, 94.5	All models beginning with CHX
	Downflow, two-stage, condensing	Natural or		
Thermo Products, LLC (Thermo Pride)	furnace	Propane Gas	93	All models beginning with CDX
	Downflow, fixed input, condensing	Natural or		
Thermo Products, LLC (Thermo Pride)	furnace	Propane Gas	93.0-94.5	All models beginning with CHB
	Upflow, fixed input, condensing	Natural or		
Thermo Products, LLC (Thermo Pride)	furnace	Propane Gas	91.5-93.0	All models beginning with CDB
Xenon Heating and Air Conditioning	Condensing furnace	Gas	90	Models beginning with XF90
Xenon Heating and Air Conditioning	Condensing furnace	Gas	95	Models beginning with XF9V
York International Corporation (Choice)	Condensing furnace		91 - 94	FG9
York International Corporation	Deluxe Diamond 95 Series		94-95	P*XU
York International Corporation	Diamond 90 Series		90	P*DR
York International Corporation	Diamond 90 Series		91 - 94	P*UR, P*DH
York International Corporation	Diamond 95 Ultra Series		92 - 94	P*XU-V, PXD-V

Note: Arristong produces Air-Ease (a Johnson line) and Concord.

Note: York International produces Coleman, Coleman Evcon, Evcon, Luxaire, and Fraser-Johnston products

Note: ICP produces Airquest, Arcoaire, Comfortmaker, Heil, and Tempstar products